



Cleaning a Thermocouple in a P9000/P12000

1. Remove the bottom panel by removing the 2 screws on the side. The bottom panel will not drop out as the fan wires will hold it in place. Just move it out of the way.
2. Locate the copper wire coming out of the bottom of the valve.
3. Disconnect the copper wire using a 9mm wrench.
4. Lightly sand the end of the thermocouple with fine sand paper or a rough scouring pad.
5. Reconnect the thermocouple into the valve. Ensure the connection is tight.
6. Replace the bottom panel.