


Re-Assembling a Large Burner Flame Spreader

1. Place the outer ring onto the flame spreader
2. Place the stainless steel bracket over top of the 4 points on the flame spreader. The edges should be slightly over top of the outer ring.

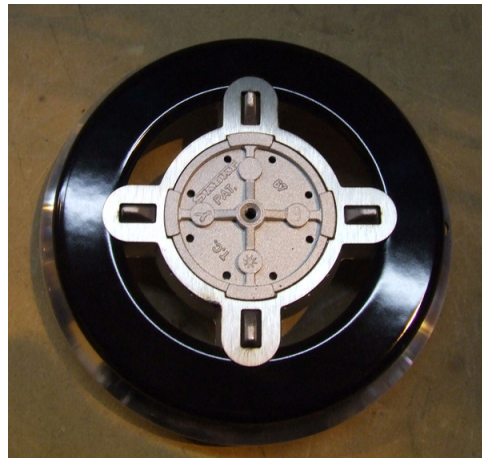

3. Place the center cap over top of the bracket.
4. Screw down the center cap tight but be careful not to strip the tapped center hole in the flame spreader

