



Relocating a valve on a Dickinson Diesel Heater

- 1) Disconnect the Copper line from the valve and from the fitting on the bottom of the burner
- 2) Disconnect the valve from the valve bracket.
- 3) Drill out the rivets holding the valve bracket onto the unit.
- 4) Turn the fitting on the underside of the burner so that it is facing towards the new valve location
- 5) Mount the valve bracket according to where the pre-set holes are. Secure with sheet metal screws.
- 6) Remount the valve to the bracket.
7. Reattach the copper line to the fitting under the burner AND the valve.